



70360: GRN2000iS

FIG.1 CRANKCASE./COVER SUBASSEMBLY, CRANKCASE (E01)

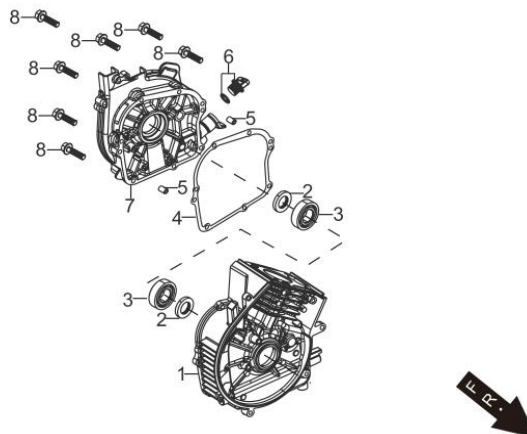

REF.NO.	PART NO	DESCRIPTION	Q'TY
E01-1	11310-Z800110-00A0	Crankcase Subassembly.	1
E01-2	90682-Z800110-00A0	Seal, Oil	2
E01-3	90547-0204-CLA0	Deep Groove Ball Bearing	2
E01-4	11001-Z800110-00A0	Gasket, Crankcase	1
E01-5	90502-0812-00A0	Position Pin - Type A	2
E01-6	15010-Z800131-Q5A0	Dipstick Subassembly, Oil	1
E01-7	11411-Z800210-00A0	Cover, Crankcase	1
E01-8	90007-0622-A1A1	Bolt	7


FIG.2 HEAD SUBASSEMBLY, CYLINDER / PLUG,SPARK (E03)

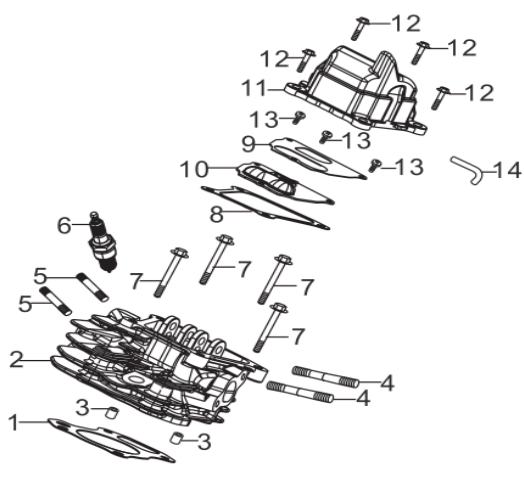

REF.NO.	PART NO	DESCRIPTION	Q'TY
E03-1	12131-Z800110-00A0	Gasket, Cylinder Head	1

E03-2	12140-Z800110-00A0	Head Subassembly, Cylinder	1
E03-3	90502-0812-00A0	Position Pin	2
E03-4	90204-Z800110-00A0	Stud Bolt	2
E03-5	90204-Z800210-00A0	Stud Bolt	2
E03-6	30010-Z350210-00A0	Plug, Spark	1
E03-7	12003-Z800110-00A0	Cylinder Head Bolt	4
E03-8	12004-Z800120-00A0	Cylinder Head Cover Gasket	1
E03-9	11320-Z800110-00A0	Stop Engine Piece Subassembly	1
E03-10	11332-Z800110-00A0	Gasket, Breath Groove	1
E03-11	12410-Z800211-00A0	Cover Subassembly, Cylinder Head	1
E03-12	90007-0616-A1A0	Bolt	4
E03-13	90103-0308-51A0	Cross-Recessed Pan Head Screw	3
E03-14	17004-Z800110-00A0	Tube, Breather	1


FIG.3 RING SET,OIL / ROD,CRANKSHAFT CONNETING (E06)

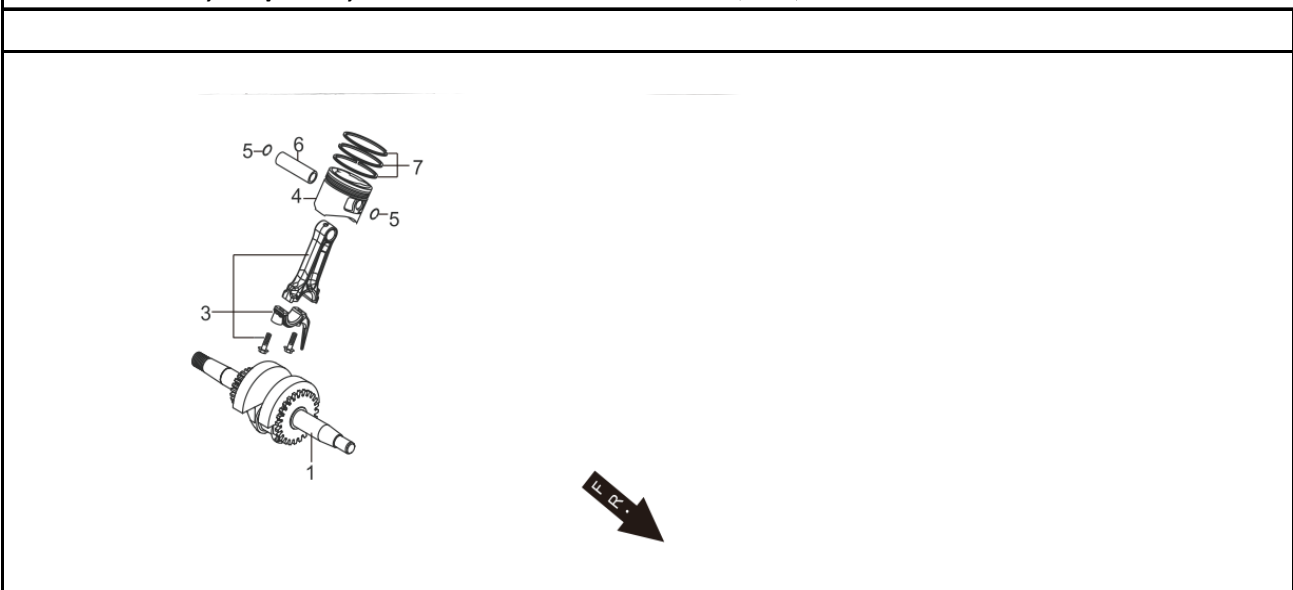

REF.NO.	PART NO	DESCRIPTION	Q'TY
E06-1	13300-Z800110-00A0	Crankshaft Assy.	1
E06-3	13010-Z800110-00A0	Rod, Connecting	1
E06-4	13111-Z800110-00A0	Piston	1
E06-5	13122-Z800120-00A0	Clip, Piston Pin	2
E06-6	13121-Z800120-00A0	Pin, Piston	1
E06-7	13200-Z800110-00A0	Ring Assy, Piston	1


FIG.4 TRAIN,VALVE / CAMSHAFT SUBASSEMBLY (E07)

--	--	--	--

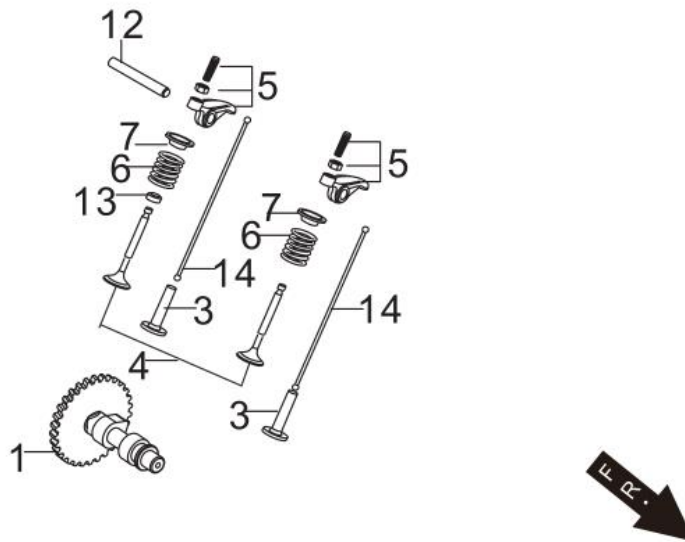


	PART NO	DESCRIPTION	Q'TY
E07-1	14200-Z800211-00A0	Camshaft Assy.	1
E07-3	14081-Z800110-00A0	Tappet, Valve	2
E07-4	12110-Z800110-00A0	Valves Set	1
E07-5	14310-Z800110-00A0	Rocker Subassembly, Valve	2
E07-6	12103-Z800110-00A0	Spring, Valve	2
E07-7	12112-Z800110-00A0	Seat, Valve Spring	2
E07-12	14330-Z800110-00A0	Shaft, Valve Rocker	1
E07-13	12101-Z800110-00A0	Guide, Seal	1
E07-14	14070-Z800110-00A0	Lifter Subassembly, Valve	2

FIG.5 STARTER,RECOIL (E08)

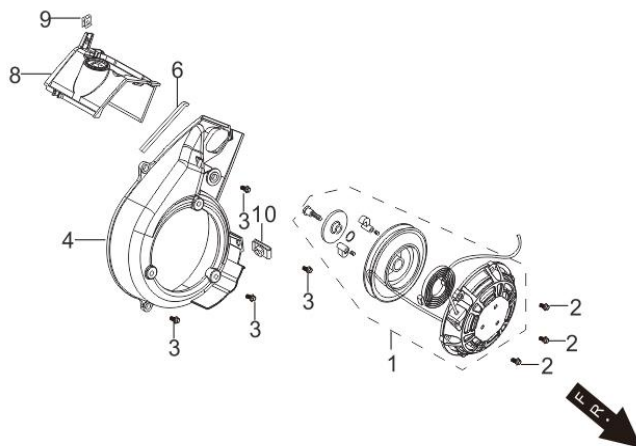


REF.NO.	PART NO	DESCRIPTION	Q'TY
E08-1	28200-Z800110-Q200	Starter Assy, Recoil	1
E08-2	90001-0612-01A0	Bolt	3

E08-3	90007-0616-A1A0	Bolt	4
E08-4	28110-Z800110-Q200	Shroud	1
E08-6	19081-Z800110-00A0	Strip, Shroud Seal	1
E08-8	12014-Z800110-00A0	Cylinder Head Wind Deflector	1
E08-9	90804-Z800210-00A0	Stop Detent	1
E08-10	17199-YE50110-01A0	Clip Nut	1

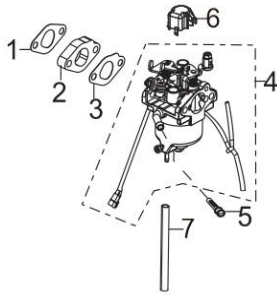
FIG.6 CARBURETOR ASSY. (E09)

REF.NO.	PART NO	DESCRIPTION	Q'TY
E09-1	16001-Z800110-00A0	Carburetor Seal Gasket	1
E09-2	16003-Z800110-00A0	Plate, Carburetor Insulator	1
E09-3	16002-Z800110-00A0	Gasket, Carburetor Insulator	1
E09-4	16100-Z800110-00A1	Carburetor Assy.	1
E09-5	16652-Z800110-00A0	Strainer, Fuel	1
E09-6	14411-Y2V0110-00A0	Cap	1
E09-7	90686-Y2V0210-00A0	Tube, Fuel	1

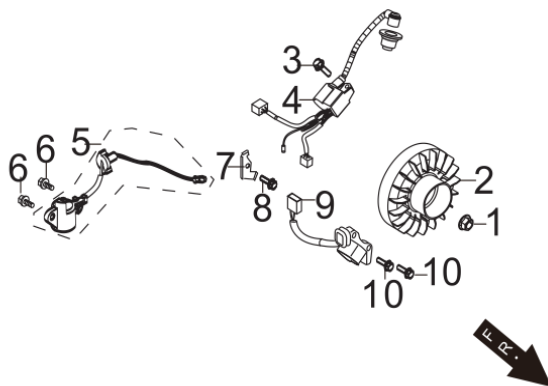FIG.7 FLYWHEEL / IMPELLER / STARTER PULLEY / IGNITION COIL (E10)


REF.NO.	PART NO	DESCRIPTION	Q'TY
E10-1	13501-Z510110-00A0	Nut, Flywheel	1

E10-2	13510-Z800410-00A0	Flywheel Subassembly	1
E10-3	90007-0620-A1A0	Bolt	1
E10-4	30700-Z800311-00A0	Ignitor	1
E10-5	37060-Z800110-00A0	Sensor, Engine Oil	1
E10-6	90007-0612-A1A0	Bolt	2
E10-7	54066-Z800110-00A0	Tension Disc	1
E10-8	90007-0612-A1A0	Bolt	1
E10-9	30400-Z800210-00A0	Coil, Ignition	1
E10-10	90007-0612-A1A0	Bolt	2

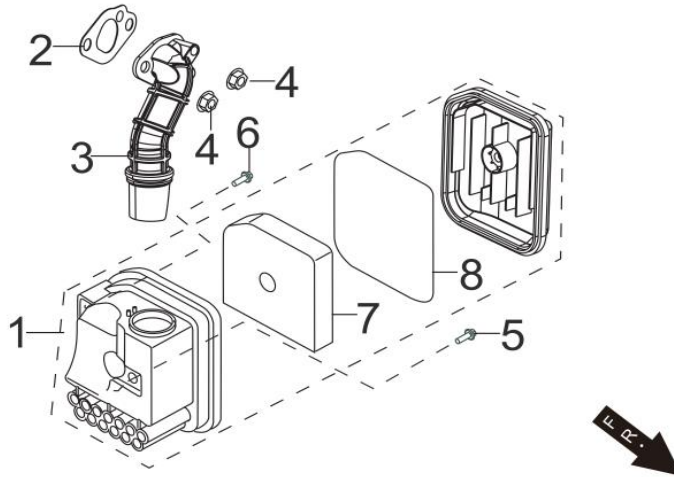FIG.8 CLEANER, AIR (F01)


REF.NO.	PART NO	DESCRIPTION	Q'TY
F01-1	17100-Z800110-00A0	Air Cleaner	1
F01-2	17001-Z800110-00A0	Air Cleaner Seal Gasket	1
F01-3	17110-Z800110-00A0	Air Cleaner Intake Duct Assembly	1
F01-4	90305-0600-31A0	Hexagon Nut With Flange	2
F01-5	90007-0520-A1A0	Bolt	1
F01-6	90007-0620-A1A0	Bolt	1
F01-7	17151-Z800110-0000	Element, Air Cleaner	1
F01-8	90681-Z800110-0000	Ring, Seal	1

FIG.9 MUFFLER ASSY. (F02)

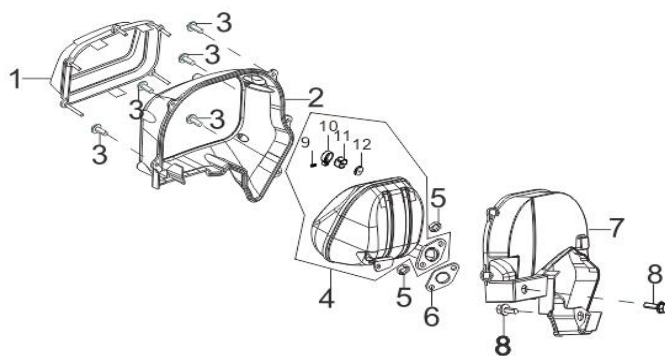


REF.NO.	PART NO	DESCRIPTION	Q'TY
F02-1	18002-Z800110-00A0	Cover, Muffler Side	1
F02-2	18109-Z800310-00A0	Shroud, Muffler	1
F02-3	90107-0516-01A0	Cross-Recessed Pan Head Self-Tapping Screw	5
F02-4	18100-Z800210-00A1	Muffler Assy.	1
F02-5	90303-0600-31A0	Type 1 Hexagon Nut	2
F02-6	18001-Z800110-00A0	Gasket, Exhaust Outlet	1
F02-7	18013HZ800210-00A0	Muffler Cover	1
F02-8	90007-0616-A1A0	Bolt	2
F02-9	18012-Z800210-0000	Muffler Bolt	1
F02-10	90740-Z800210-0000	Collar	1
F02-11	18213-Z800210-0000	Muffler Air Duct Cover	1
F02-12	18218-Z800210-0000		1

FIG.10 TANK, FUEL (F03)

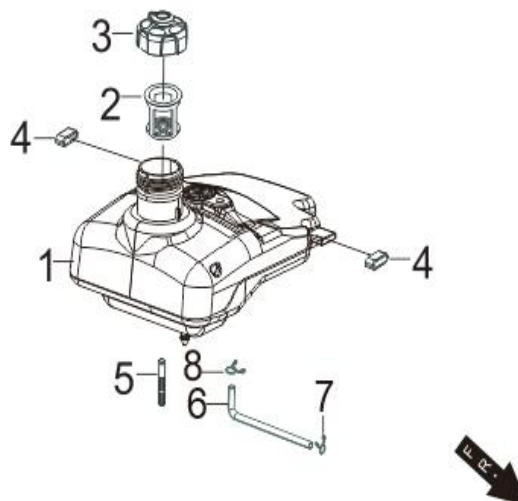


REF.NO.	PART NO	DESCRIPTION	Q'TY
F03-1	16620-Y2V0140-Q2A1	Fuel Tank	1
F03-2	16652-Y2V0110-00A0	Strainer, Fuel	1
F03-3	16730-YDZ0110-Q2A0	Cover, Fuel Tank	1
F03-4	90683-Y2V0110-00A0	Bush	2
F03-5	16514-Y2V0110-00A0	Element, Strainer	1
F03-6	90686HY2V0310-00A0	Tube, Fuel	1
F03-7	90740-Z010210-00A0	Collar	1
F03-8	90685-Z030510-00A0	Pipe Clamp	1

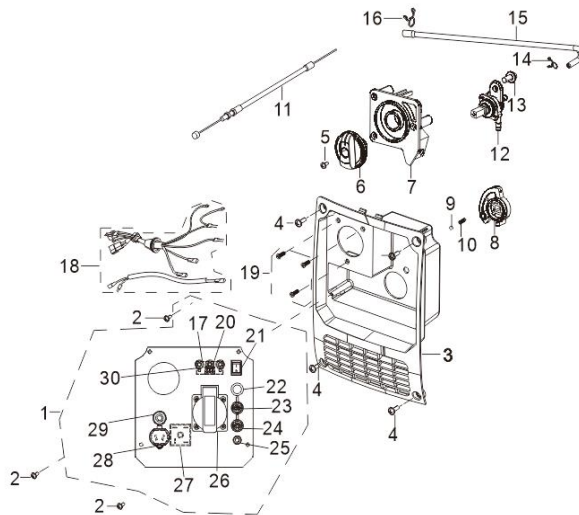FIG.11 (F05)


REF.NO.	PART NO	DESCRIPTION	Q'TY
F05-1	35610-Y2V2S10-H7A0	Panel Subassembly, Control	1
F05-2	90124-Y9T0310-00A0	Self-Tapping Screw	4
F05-3	35680-Y5V0110-Q2B0	Seat, Panel	1
F05-4	90255-0516-53A0	Cross-Recessed Small Pan Head Screw, Spring Washer And Flat Washer Assembly	4
F05-5	90103-0416-51A0	Cross-Recessed Pan Head Screw	1
F05-6	35643-Y2V0210-Q2A0	Knob	1
F05-7	35160-YB00111-00A0	Switch Subassembly	1
F05-8	94111-Y2V0410-00A0	Cover Plate	1
F05-9	90543-0500-00A0	Ball, Steel	1
F05-10	16527-Y2V0210-00A0	Spring, Stopper Adjusting	1
F05-11	16080-Y2V0110-00A0	Handle Subassembly, Choke	1
F05-12	16750-Y2V0141-00A0	Cock Assy, Fuel	1
F05-13	90001-0614-01A0	Bolt	2
F05-14	90740-Z010210-00A0	Collar	1
F05-15	90686HY2V0410-00A0	Tube, Fuel	1
F05-16	90740-Z450110-00A0	Collar	1

F05-17	37099-Y2V0210-0000	Indicator Mounting Base	3
F05-18	35660-YB00120-00A0	Harness, Control Panel Wiring	1
F05-19	90129-0416-01A0	Cross-Recessed Countersunk Head Tapping Screw	3
F05-20	35654-Y2V0210-0000	Rain Cover Receptacle	3
F05-21	35160-Y0G0110-0000	Switch Subassembly	1
F05-22	35646-YB10110-0000	Button, Resetting	1
F05-23	35614-Y2P0210-0000	Socket Subassembly, Power Supply	1
F05-24	35614-Y2P0310-0000	Socket Subassembly, Power Supply	1
F05-25	35629-Y2V0110-0000	Terminal Subassembly, Grounding	1
F05-26	35614-Y020110-0000	Socket Subassembly, Power Supply	1
F05-27	35621-Y020110-0000	Bridge, Rectification	1
F05-28	35619-Y2V0110-0000	Socket Subassembly, D.C	1
F05-29	31234-Y9H0110-0000	Protector, Overcurrent	1
F05-30	35620-YAY0110-0000	Status Display Board Assembly	1

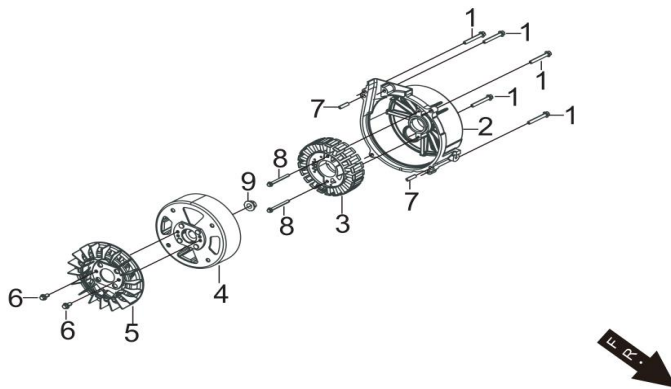FIG.12 ROTOR/STATOR (F06)


REF.NO.	PART NO	DESCRIPTION	Q'TY
F06-1	90001-0630-01A0	Bolt	5
F06-2	30024-Y5V0110-00A0	Shroud, Motor	1
F06-3	30120-YC40110-00A1	Stator Subassembly, Magneto	1
F06-4	30110-Y2V0130-00A2	Case Subassembly, Magneto Rotor	1
F06-5	19352-Y2V0110-Q2A0	Impeller	1
F06-6	90001-0610-01A0	Bolt	2
F06-7	90502-0814-00A0	Position Pin	2
F06-8	90001-0535-01A0	Bolt	2
F06-9	90306-1200-31A0	Hexagon Nut With Flange - Fin Thread	1

FIG.12 (F32)

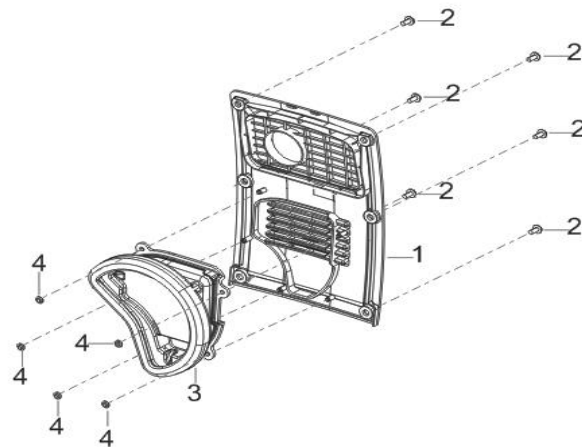


REF.NO.	PART NO	DESCRIPTION	Q'TY
F32-1	18002-Y2V0210-Q2A0	Cover, Muffler Side	1
F32-2	90255-0516-53A0	Cross-Recessed Small Pan Head Screw, Spring Washer And Flat Washer Assembly	6
F32-3	53202-Y2V0210-00A0	Cushion, Joint Rubber	1
F32-4	37073-Y2V0110-00A0	Spring Clamp	5

FIG.13 (F33)

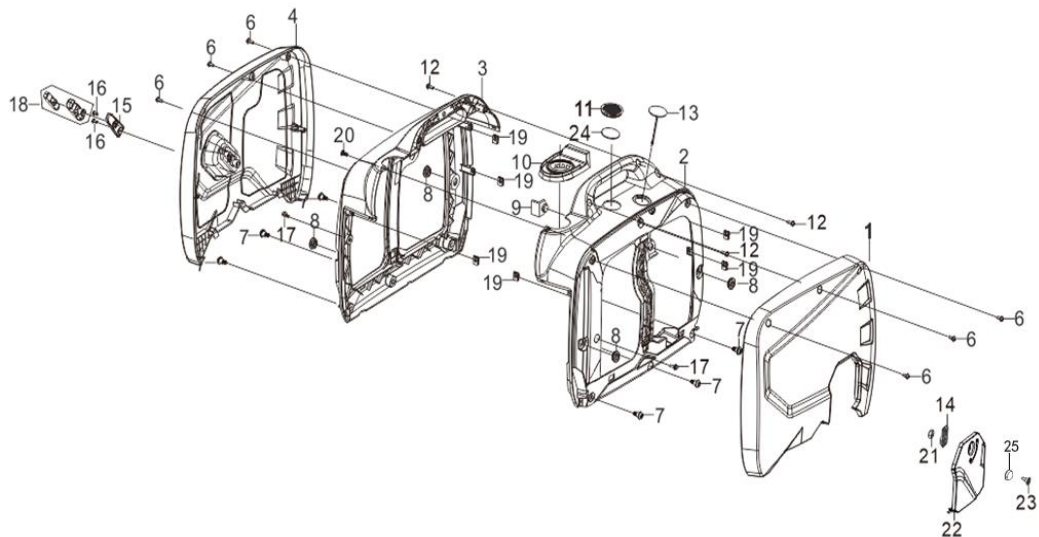

REF.NO.	PART NO	DESCRIPTION	Q'TY
F33-1	80096HY2V0110-Q2A0	Right Appearance Cover Plate	1
F33-2	80095-Y5V0120-Q2B0	Right Housing	1
F33-3	80091-Y5V0120-Q2B0	Left Housing	1
F33-4	80092HY2V0310-Q2A0	Left Housing Cover Plate	1
F33-6	90208-YB00210-00A0	Hexagonal Step Bolt	6
F33-7	90208-Y2V0110-00A0	Hexagonal Step Bolt	6

F33-8	16601-Y2V0210-00A0	Sleeve, Fuel Tank Rubber	4
F33-9	50033-Y2V0110-00A0	Cushion, Engine Upper Suspension Rubber	4
F33-10	16641-Y2V0110-00A0	Sleeve, Filling Oil Hole Rubber	1
F33-11	30431-Y2V0310-00A0	Jacket, Rubber	1
F33-12	90255-0516-53A0	Cross-Recessed Small Pan Head Screw, Spring Washer And Flat Washer Assembly	3
F33-13	30431-Y2V0110-00A0	Jacket, Rubber	1
F33-14	24329-Y9T0120-Q2A0	Stopper	1
F33-15	28004-Y2V0210-00A0	Guide Subassembly, Starting Rope	1
F33-16	90255-0512-53A0	Cross-Recessed Small Pan Head Screw, Spring Washer And Flat Washer Assembly	2
F33-17	90007-0612-A1A0	Hexagon Socket Flange Face Bolt - Big Series - Grade B	2
F33-18	28210-Y2V0110-00A0	Handle, Recoil Strater Cable	1
F33-19	17199-YE50110-01A0	Clip Nut	6
F33-20	90124-Y9T0310-00A0	Self-Tapping Screw	1
F33-21	90341-YA50110-00A0	Nylon Nut	1
F33-22	51197HY2V0110-Q2A0	Right Access Door	1
F33-23	90208-Y9T0120-00A0	Hexagonal Step Bolt	1
F33-24	37205-Y2V0310-00A0	Opening, Oil Leverler View	1
F33-25	37073-Y2V0110-00A0	Spring Clamp	1

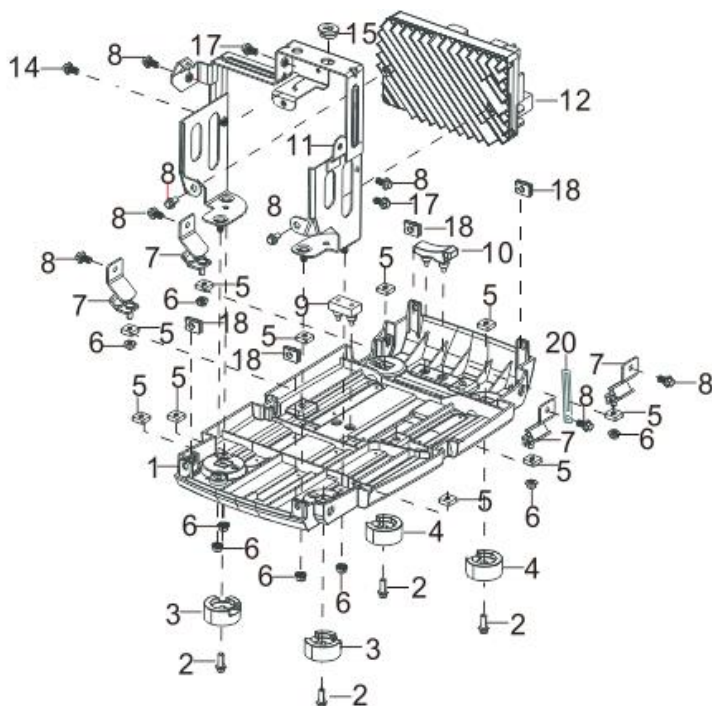FIG.14 (F34)

REF.NO.	PART NO	DESCRIPTION	Q'TY
F34-1	51143-Y5V0210-Q2B0	Plate, Bottom	1
F34-2	90001-0614-01A0	Hexagon Socket Flange Face Bolt - Small Series	4

F34-3	51014-Y2V0140-00A0	Seat, Engine Frame Shock Absorption	2
F34-4	51014-Y2V0250-00A0	Seat, Engine Frame Shock Absorption	2
F34-5	90326-Y2V0110-00A0		10
F34-6	90305-0600-31A0	Hexagon Nut With Flange	8
F34-7	51005-Y2V0110-00A0	Cushion, Engine Frame	4
F34-8	90001-0612-01A0	Hexagon Socket Flange Face Bolt - Small Series	8
F34-9	50035-Y2V0210-00A0	Buffering Pad Support	1
F34-10	50035-Y2V0110-00A0	Buffering Pad Support	1
F34-11	30081-Y2V0120-H7A0	Invertor Mounting Rack	1
F34-12	30043-YC40710-00A0	Invertor	1
F34-14	90001-0612-01A0	Bolt	1
F34-15	16601-Y2V0110-00A0	Sleeve, Fuel Tank Rubber	1
F34-17	90001-0612-01A0	Hexagon Socket Flange Face Bolt - Small Series	3
F34-18	17199-YE50110-01A0	Clip Nut	4